


## ASSEMBLY INSTRUCTION SOFA SET - WS419.2

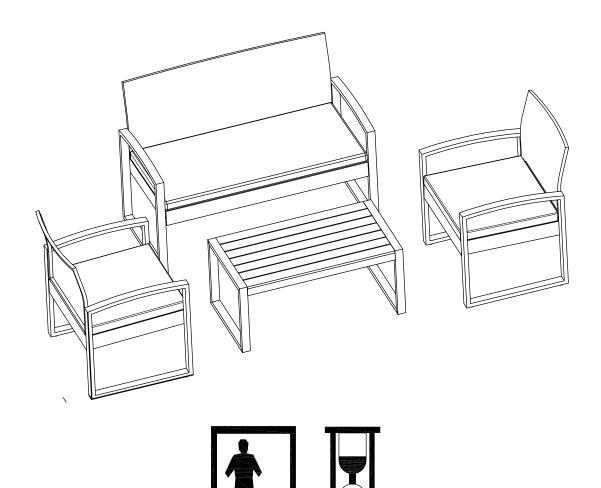

## Notice:

- 1. Tighten all screws by 50% before fixing. It is recommended to use an Allen wrench instead of an electric drill
- 2. Place the item on a flat surface to adjust and ensure stability.
- 3. Gradually tighten all screws with tools.
- 4. If screws do not align with holes during assembly, please loosen all other screws by 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all screws, adjust it on a flat surface, and then tighten all screws again.
- 6. Note: If one or more screws are fully tightened during assembly, there is a chance that others will not align with the holes. Additionally, all holes are designed to be relatively larger to provide more space for adjusting the screws.

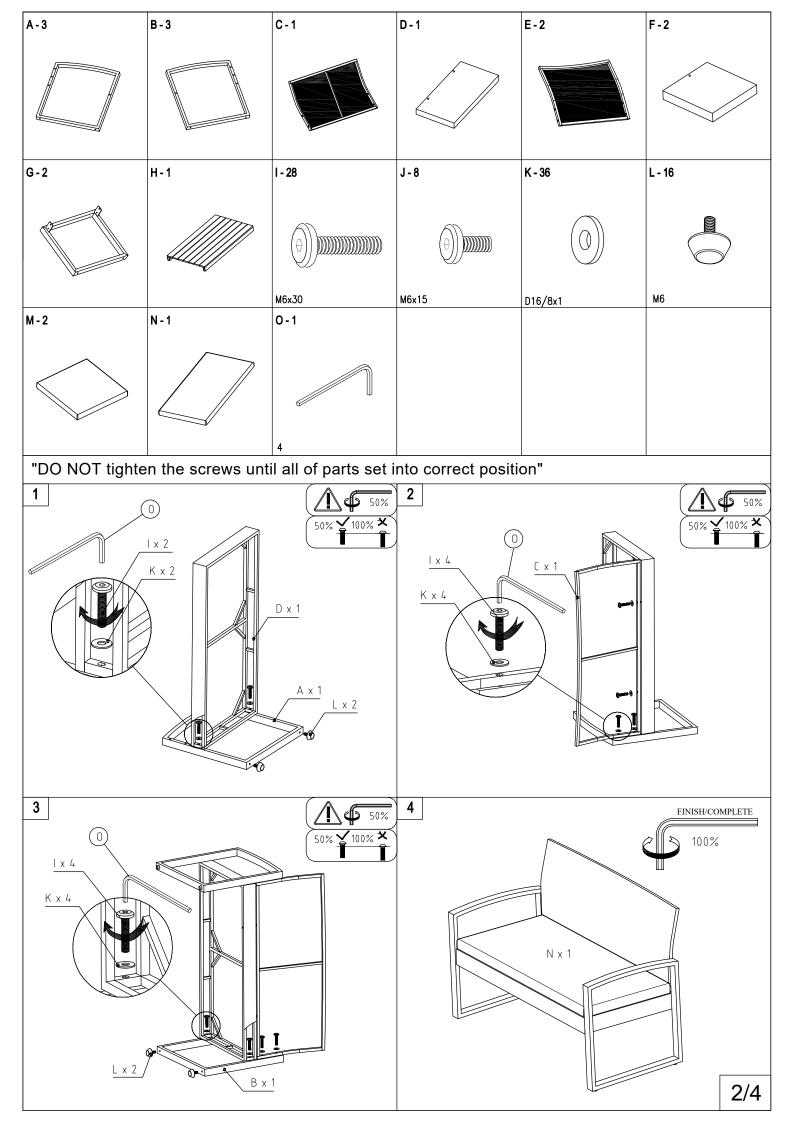

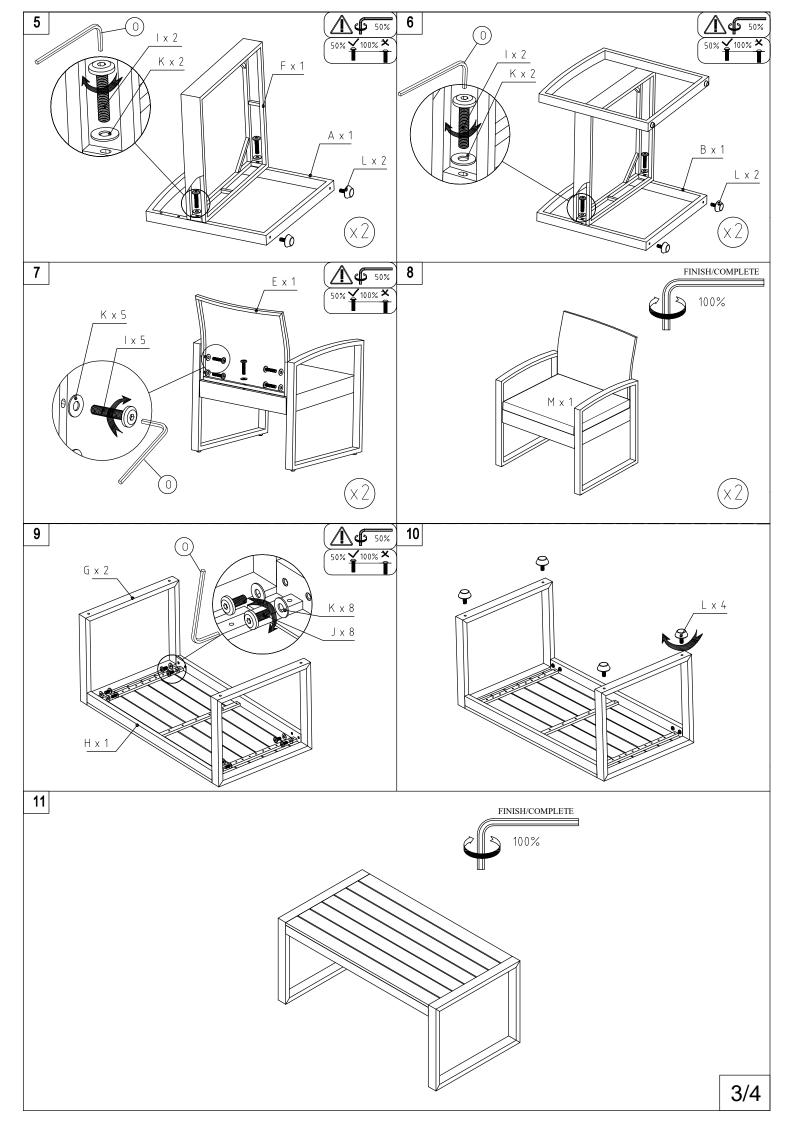

## THANK YOU FOR CHOOSING US

Thank you for your order. If you are satisfied with our product, please leave a positive review. Our goal is to provide high quality outdoor furniture with outstanding customer service - all at an affordable price.

## One year warranty

If there is a manufacturing defect, we will send you a FREE replacement within 1 year of your purchase date. Register your product warranty by sending an email to customerservicesW2319@gmail.com or scanning QR code below:

- 1. Email title "Warranty Registration"
- 2. Write "order platform, PO number, order date, product name"
- 3. Click to send