




# Assembly Instructions

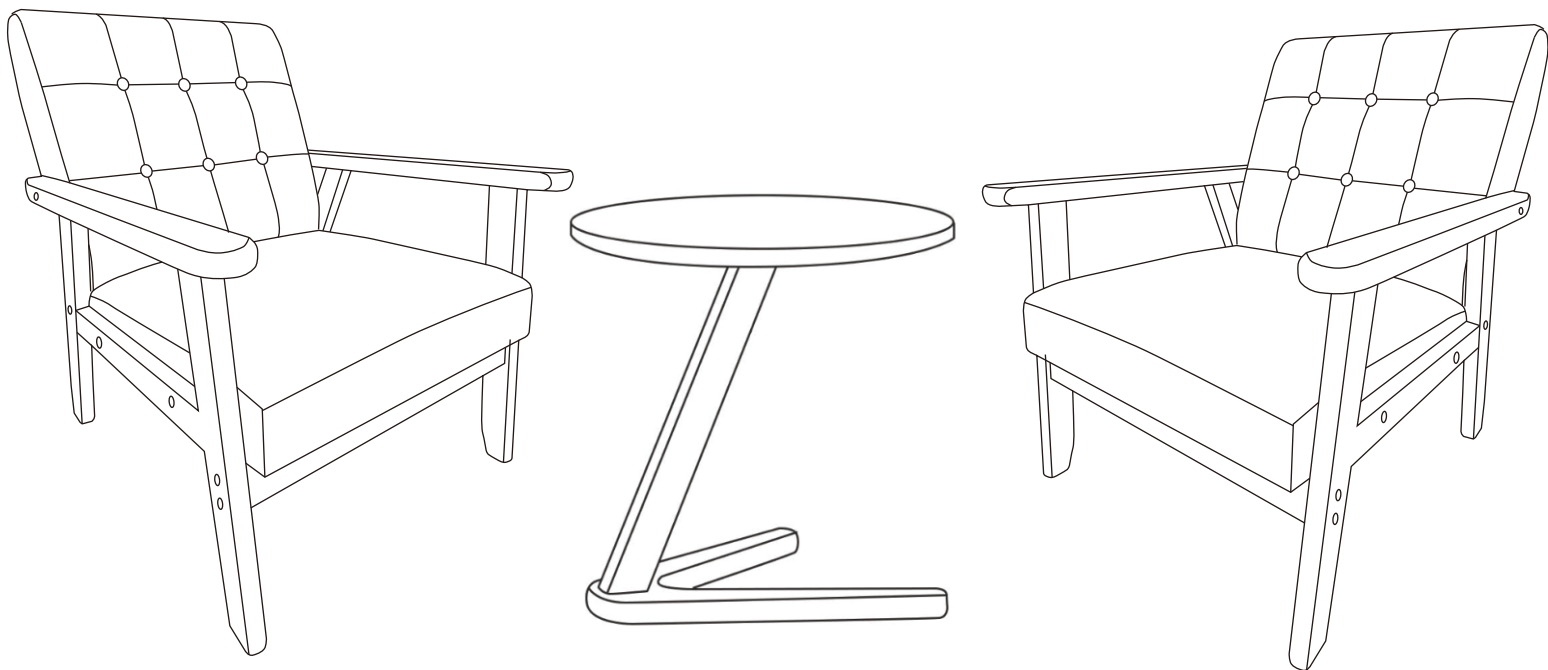


PARTS CHECKLIST

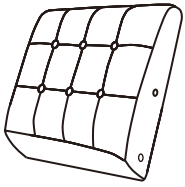


Ax2PCS



Bx2PCS

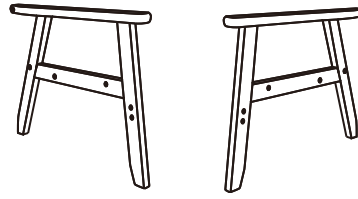


Cx2PAIRS

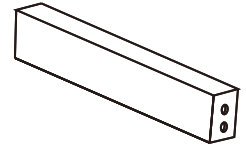

Dx2PCS



Ex24PCS

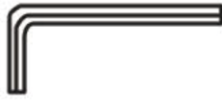


Fx1PC




Gx24PCS




Hx8PCS

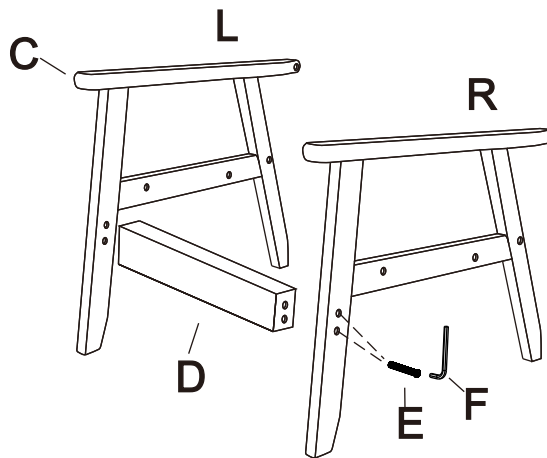


**Step 1:** Connect Crosspiece [ D ] to Armrests [ C ] with Screw [ E ]. And tighten them by 70%.

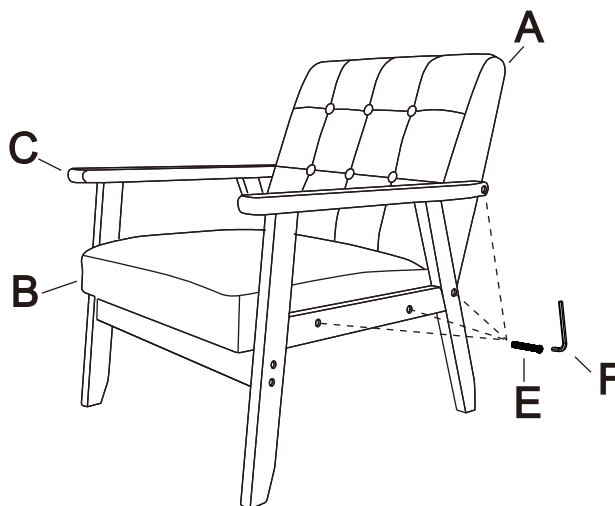

**Step 2:** Connect Armrests [ C ] to the Backrest [ A ] and Seat [ B ] with Screw [ E ]. Tighten them by 70%. Make sure the accent chair is leveled on the ground. Then tighten all the screws by 100%.




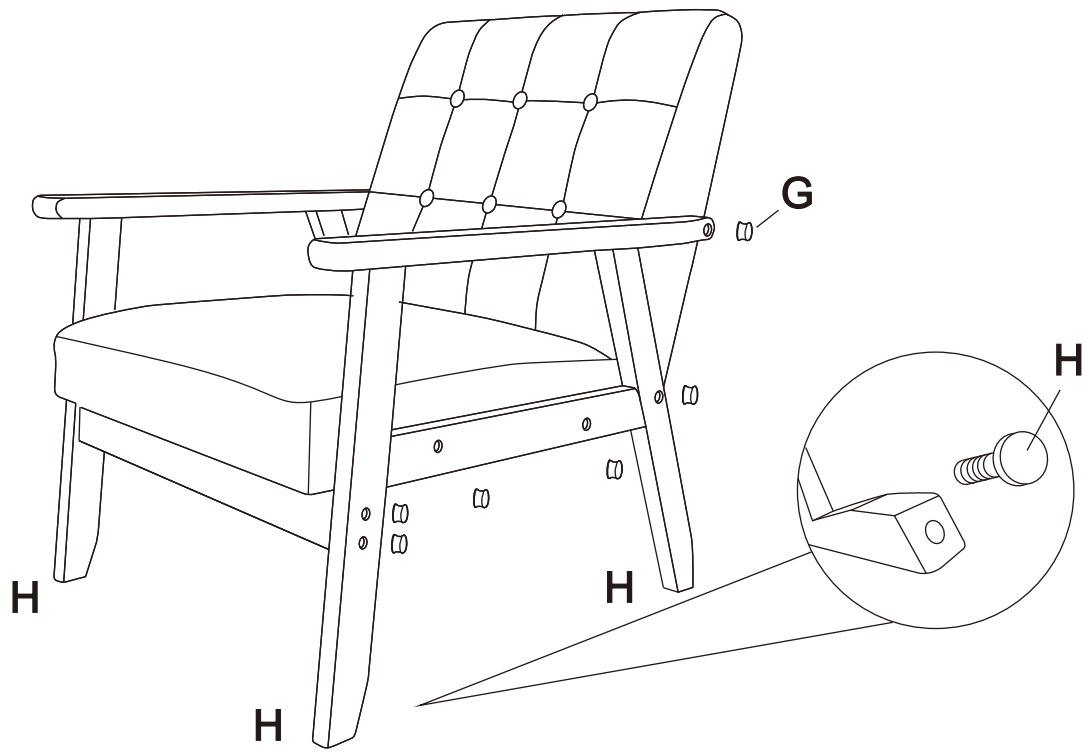



**Step 3:** Put the hole caps [ G ] into the screw holes. And install the adjusting nails [ H ] to the bottom of them .

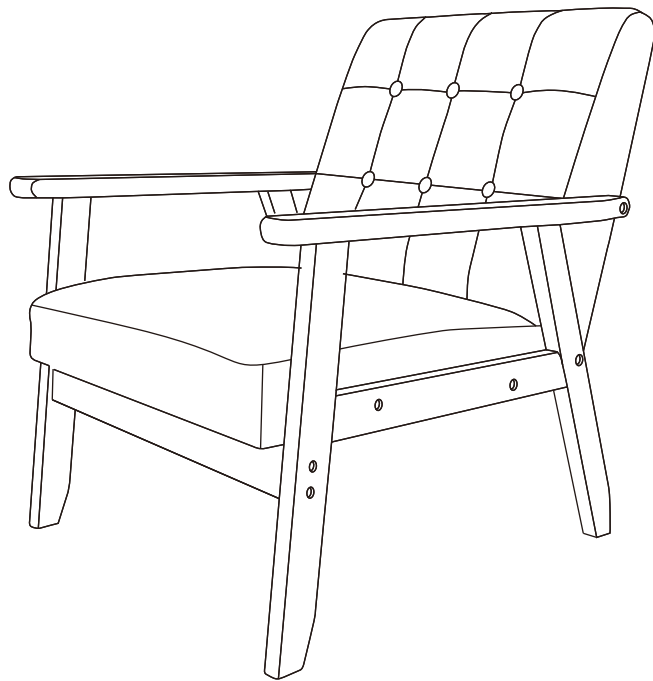


**Step 4:** Enjoy your new Accent Chair!

PARTS CHECKLIST

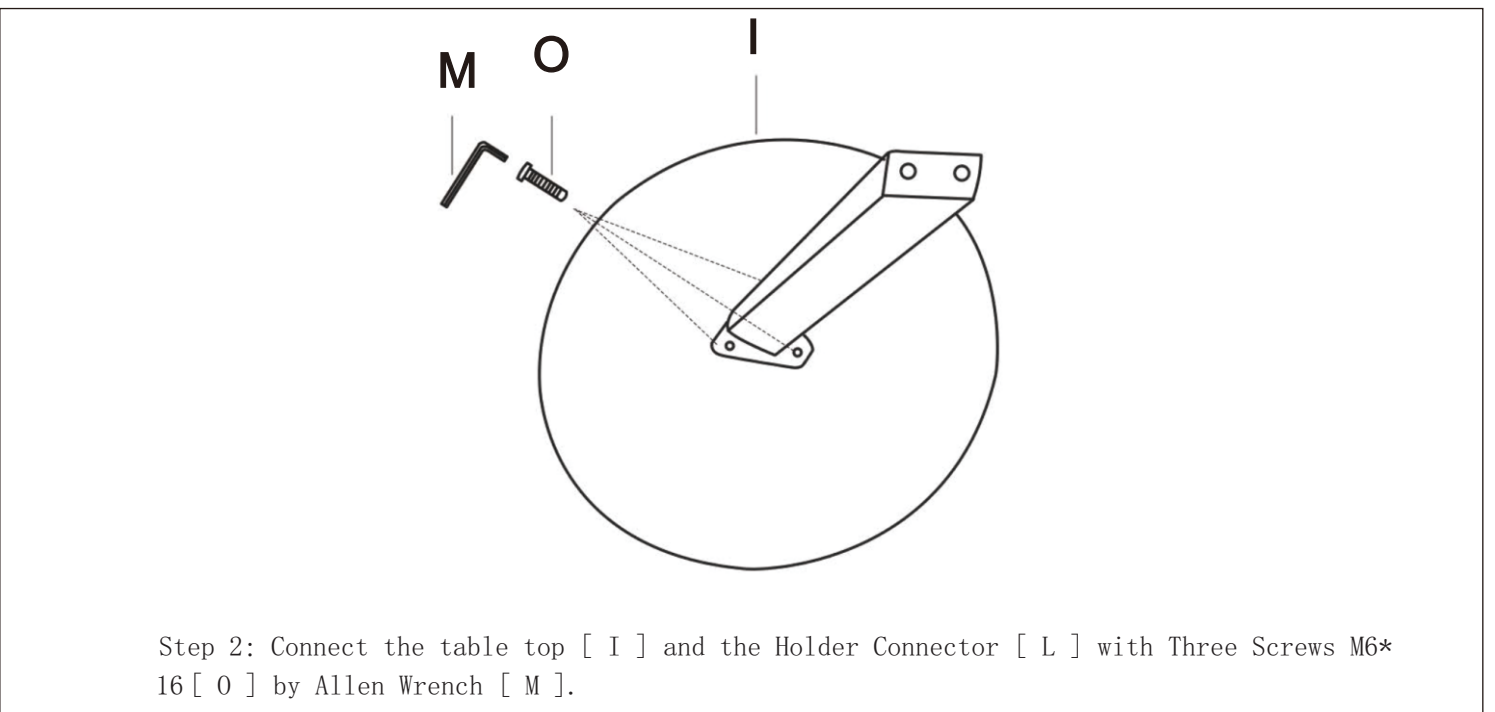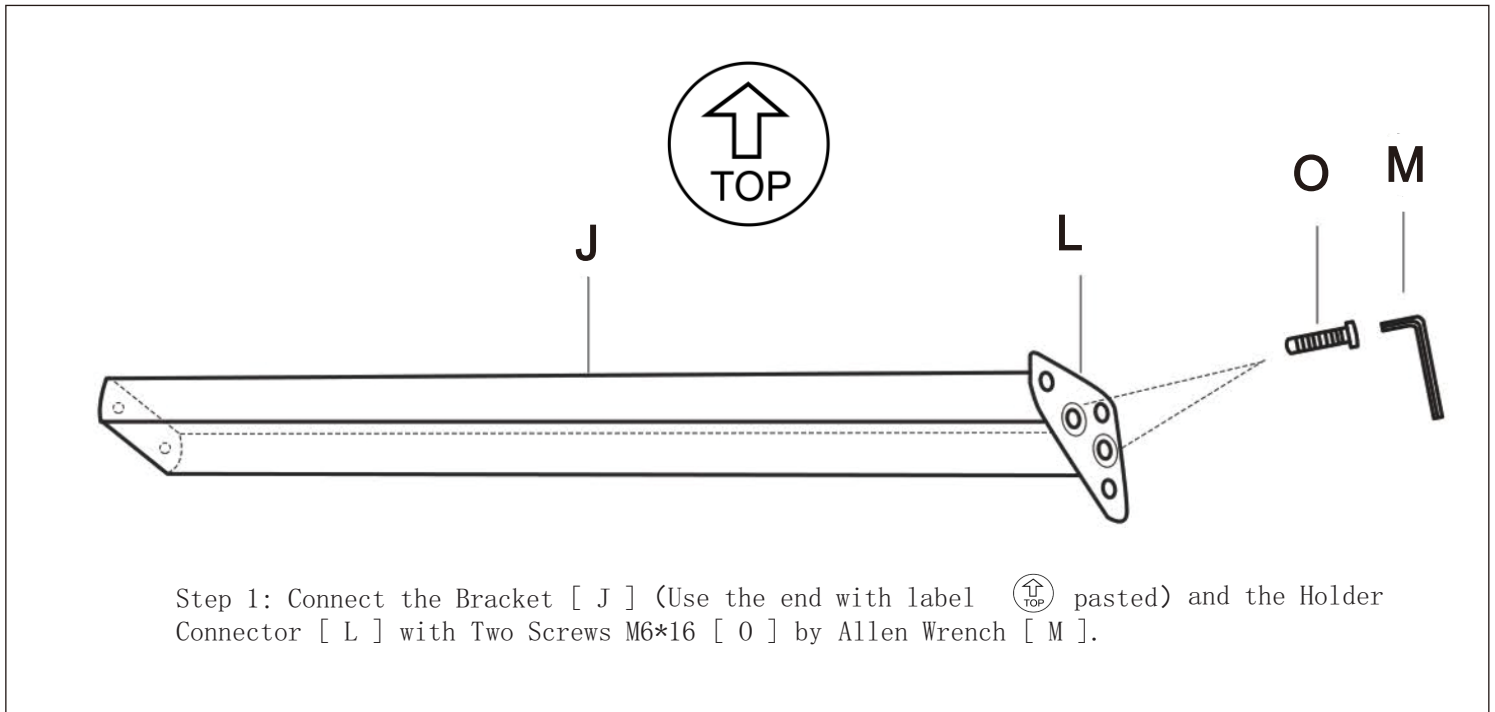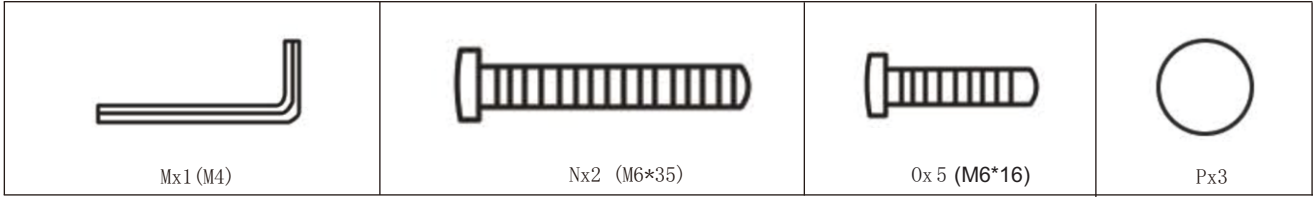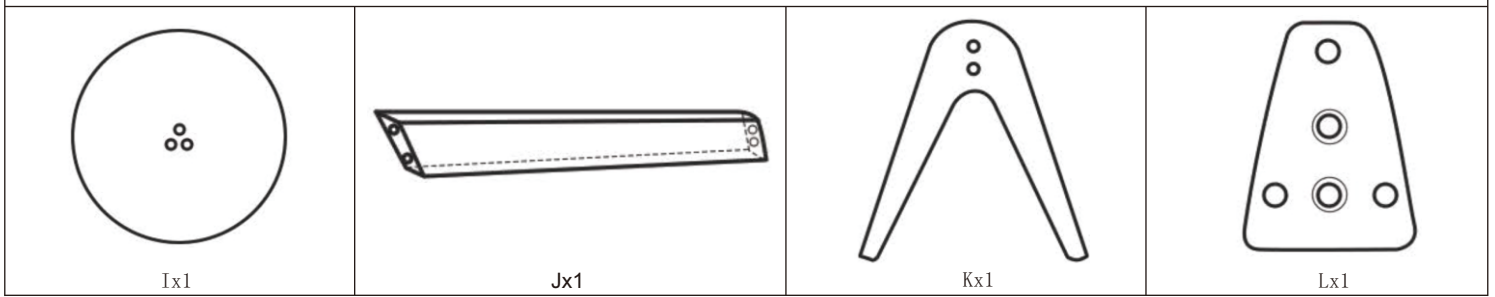

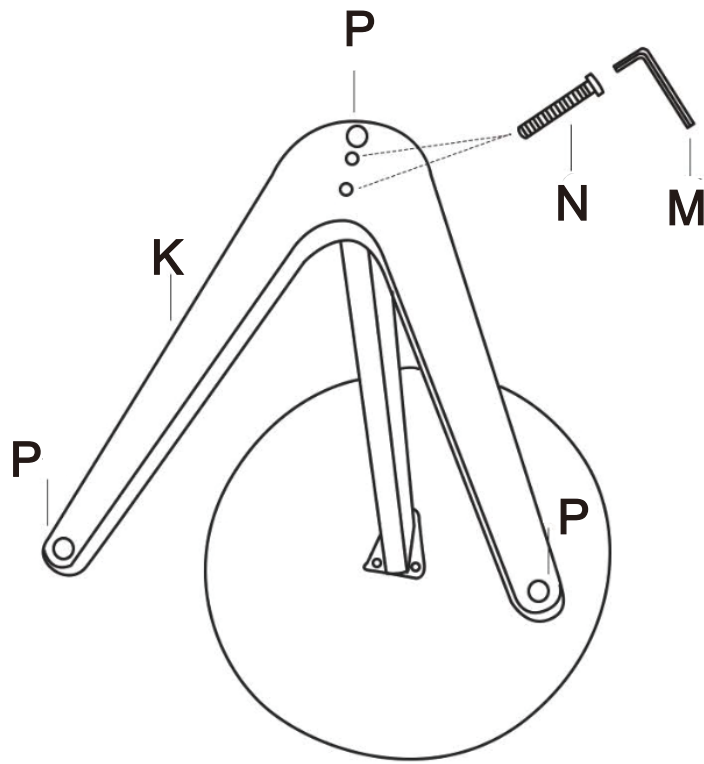

**Step 3:** Connect the Base [ K ] and the Bracket [ J ] with Two Screws M6\*35 [ N ] by Allen Wrench [ M ]. And paste the foot pad [ P ] to the bottom of base.

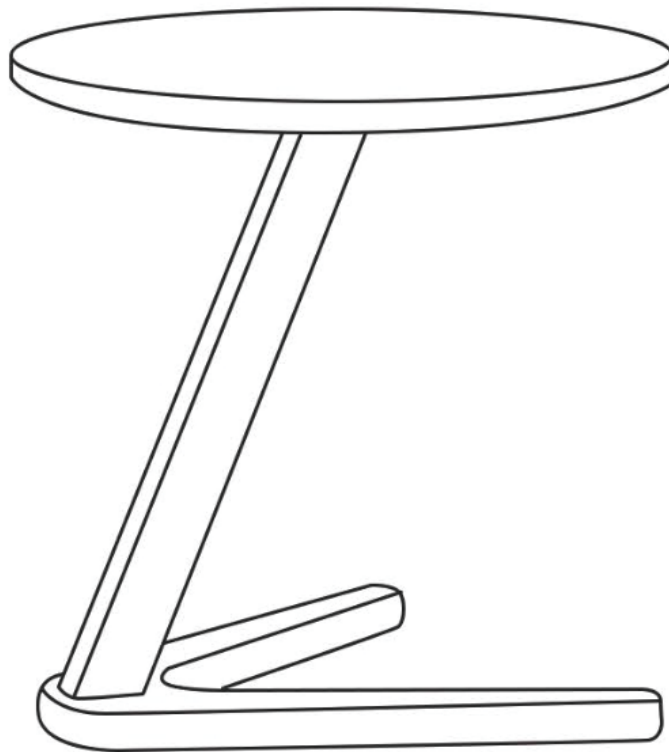

**Step 4:** Enjoy your new Table!